

## Encanto setting

### F3L Encanto X Camber CG 102 mm

Elevator Zero position is 17 mm from the ground	Down	Up	Start	Speed	EXP
	-18 mm	+10 mm	-1 mm	-1 mm	50
Rudder	Left	Right	EXP		
	-30 mm	+30 mm	50		
Mix Elevator and butterfly	Elevator	Spoilers			
	+5 mm	85°			
Tow hook	27 mm	from the beginning of the section			

### F3L Encanto X Standard CG 101 mm

Elevator Zero position is 19 mm from the ground	Down	Up	Start	Speed	EXP
	-14 mm	+10 mm	-1 mm	-1 mm	70
Rudder	Left	Right	EXP		
	-30 mm	+30 mm	70		
Mix Elevator and butterfly	Elevator	Spoilers			
	+5 mm	80°			
Tow hook	28 mm	from the beginning of the section			

### Ballast - Average wind

Empty - from 0 to 1 m/s

2 brass and 4 plastic - from 1 to 3 m/s

4 brass and 2 plastic - from 3 to 5 m/s

6 brass and 0 plastic - from 5 to 8 m/s

Take your first flight/training either in the morning or early evening to properly set the center of gravity, rudder, and elevator.